



- Read the LTE Modem **Documentation** for further information and detailed instructions

5) Place it correctly

- Keep within **6 m** of the SRR source (**SIAC** or **BSF8-SRR**)
- For **multi-direction passing**: Mount **on the same stand** as the station
- For **one-direction fast passing**: Place about **6 m behind** the station (direction of passing)
- Keep **30 m** between two modems
- Mount **vertically** if possible

6) Switch off the LTE Modem

1. Hold the ON/OFF card at **"0/1"** for about **5 seconds**.
2. Release when the **Data LED flashes red 5 times** and the LEDs go off.

SPORTident GmbH
Markt 14, 99310 Arnstadt, Germany
support@sportident.com | www.sportident.com

QUICK START GUIDE LTE Modem

The SPORTident LTE Modem enables live data for sports events. It is robust and extremely easy to use.





1) Switch on the LTE Modem

1. Hold the **magnetic ON/OFF card** next to the **"0/1"** mark
2. Wait for the LTE Modem to come online ->
Connection LED:
 - **Fast red flashing** = connecting
 - **Flash every 5 seconds (green/yellow)** = connected

2) Activate the LTE Modem **before the first use only**

- Make sure the LTE Modem you want to activate is switched on and connected to the network
- Make sure you have a **SPORTident Center** account, if not: create an account
- **Sign in** to SPORTident Center
- Go to the **"Modems"** page
- Select **"Actions"** → **"Activate modem"**
- **Enter** the modem's **serial number**
- Wait for the activation to complete (requires network connection)



SPORTident Center
Sign in / Sign up



3) LED description

1. **Data LED** flashes blue: Modem is receiving SRR timing data from a SIAC or BSF8-SRR Station
2. **Connection LED:**
 - **Green flash (every 5 s)** = good signal
 - **Yellow flash (every 5 s)** = weak signal
 - **Fast red flashing** = searching for a connection, not connected yet
3. **Battery LED:** Indicates battery status, Bluetooth pairing mode, and charging status.

4) Data configuration and reception

- The LTE Modem **can only be configured with the Config App** on Android and iOS devices (for download links to the Google Play Store and the Apple App Store, see the LTE Modem Documentation.)
- Scan the **QR-Code** on the back of your **modem** to check status and the data the SI-Center has received
- If you do not have a network connection select your region and network provider via **Config App**



LTE Modem
Documentation